


## Yealink BH74 Wireless Headset

### Connect to PC via Bluetooth


1. Make sure the headset is in Bluetooth pairing mode.
2. Connect the BT51 dongle to your PC.
3. Select Yealink BH74 on your PC.
4. After the connection is successful, the headset's LED indicator turns solid green for 2s.

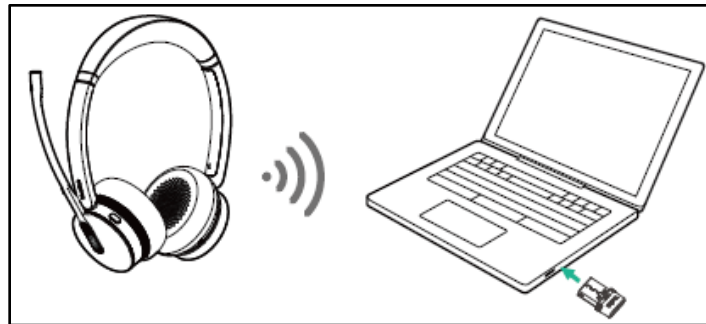


### Connect to PC via Cable




### Mute Headset

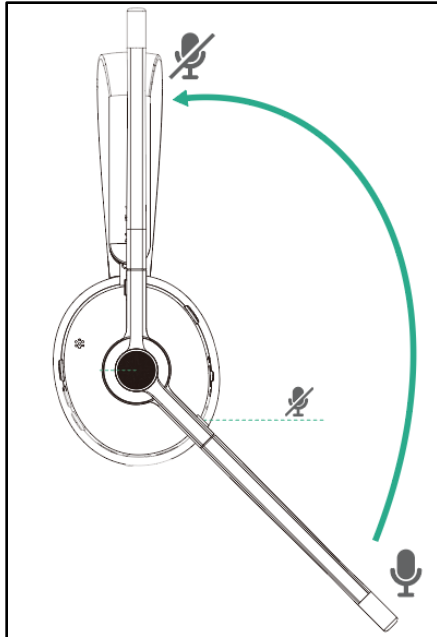

### Adjust Volume

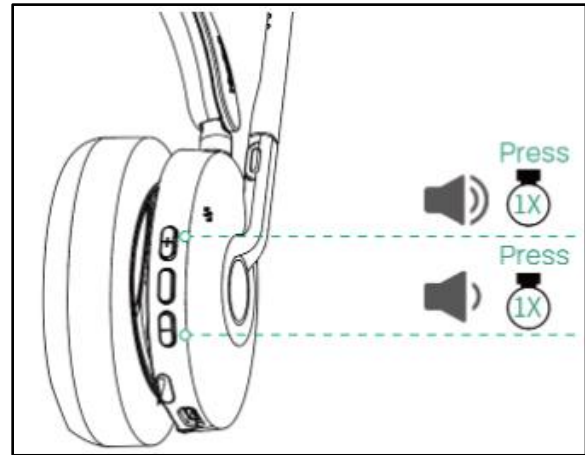

### Call Control

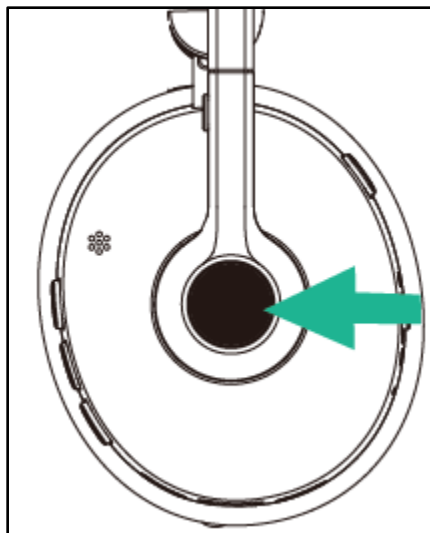

### Media Control

